


## SNOWDOG COVER INSTALLATION

- 1 Prepare the workstation, required tools and SnowDog for the cover installation procedure.
- 2 Put the cover on the front-light mounting bracket.

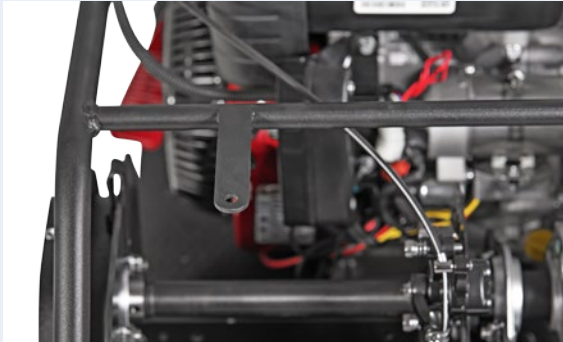

- 3 Insert the cover under the chain protection edge.



- 4 Secure the cover and the front mud flap with screws.




- 5 Put on the left side of the cover and secure it with Velcro.



- 6 Secure the cover with a screw behind the chain protection.



- 7 Put on the right side of the cover and secure it with Velcro.

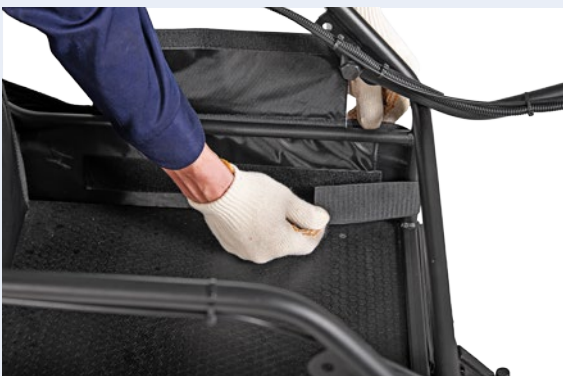

- 8 Install the cover support bracket under the cover and secure it with screws on the left, right and upper sides.



- 9 Secure the cover with screws near the chain protection.



10 Secure the cover on the bottom left and right sides.



13 Bend the cover support bracket to ensure there is a sufficient distance between the cover and the muffler.



11 Install the shutter between the engine compartment and the cargo compartment.

12 Install the chain protection cover.

